
 

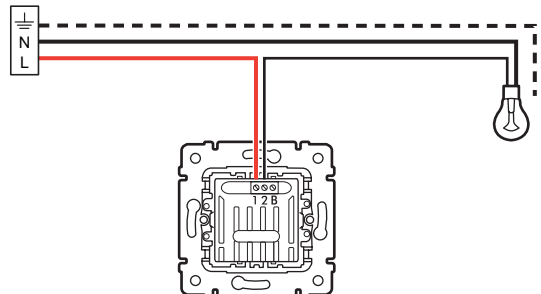

 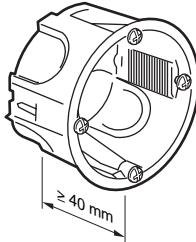
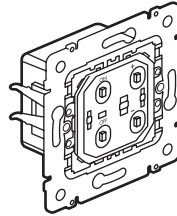
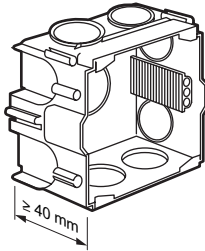

 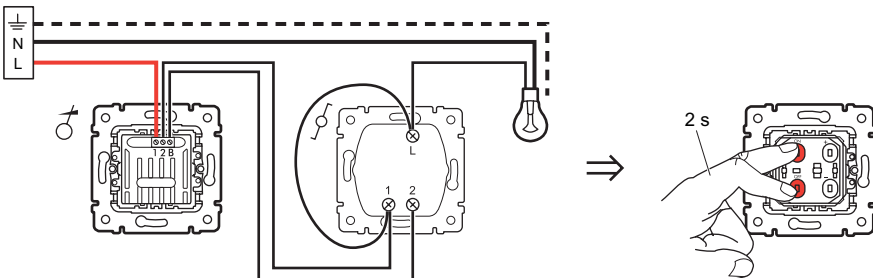
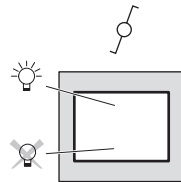
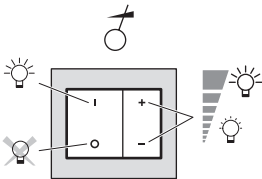









35° 100-240 V 50/60 Hz			+	+
	230 V Max. 400 W Min. 40 W	400 W 40 W	400 W 40 W	400 VA 40 VA
110 V Max. 200 W Min. 20 W	200 W 20 W	200 W 20 W	200 VA 20 VA	200 VA 20 VA

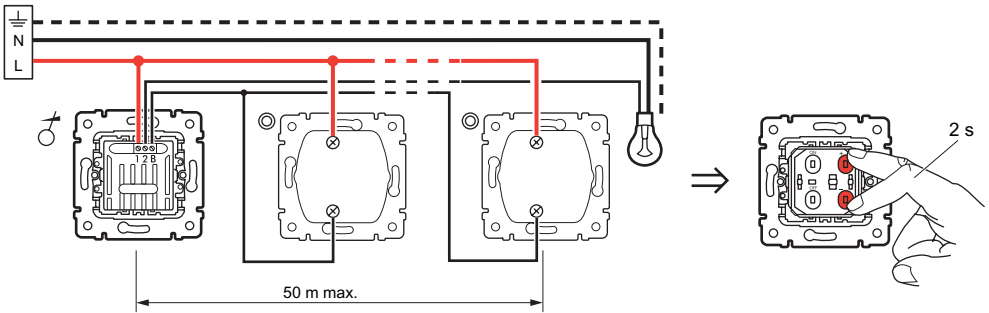


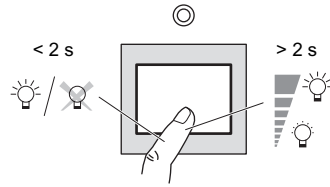


Внимание! Для подключения дополнительных кнопок используйте провод, а не кабель!

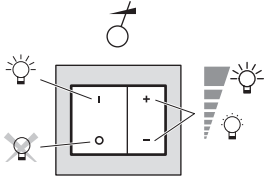

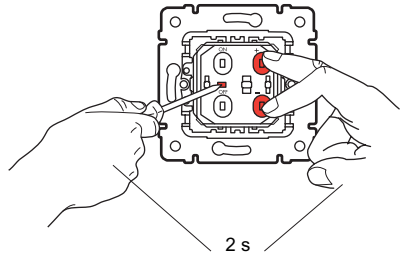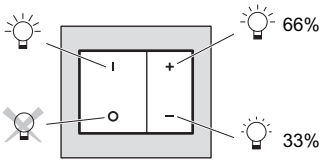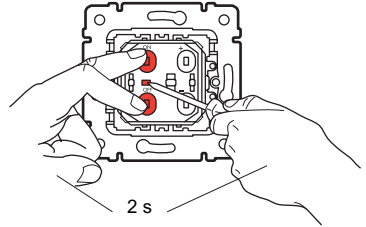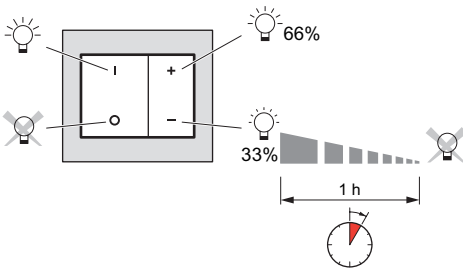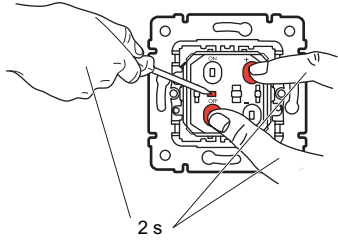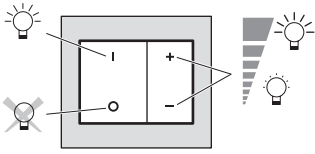

MEM

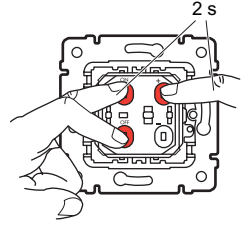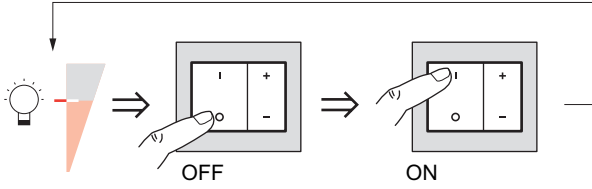

~~MEM~~

